



C.P.U. - I/O - SOUND Board


(Printed Circuit 1B1156)

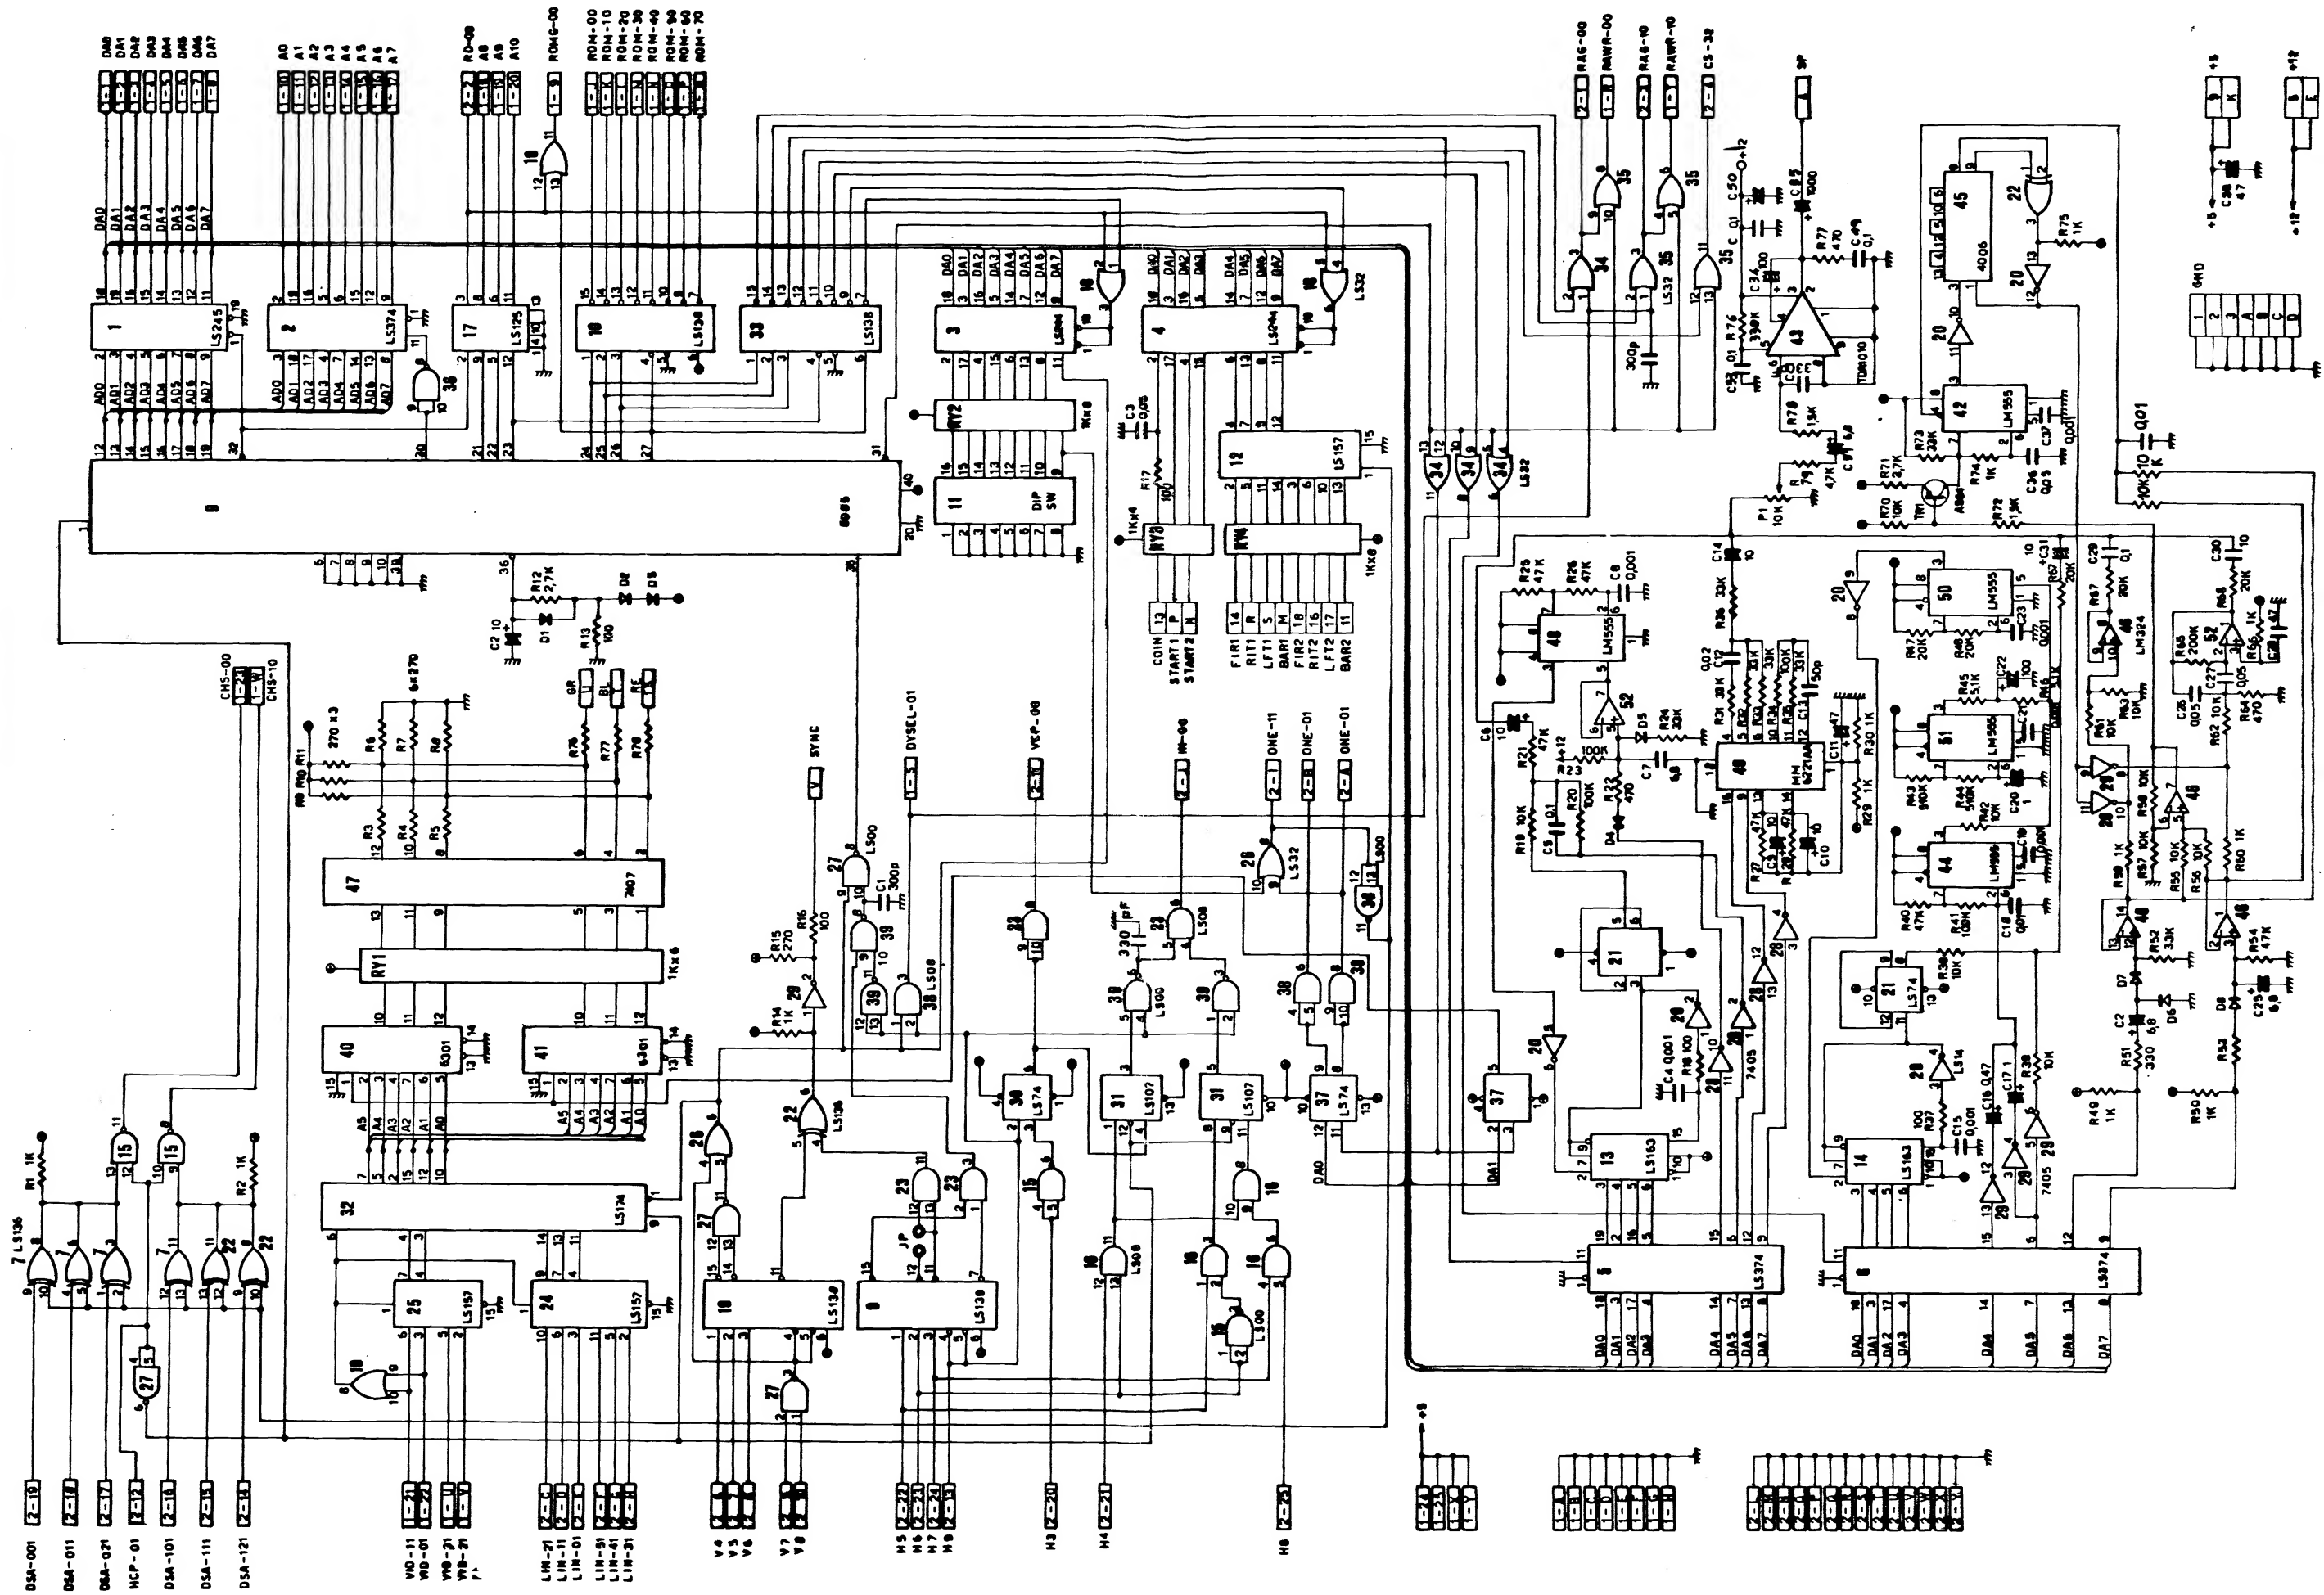



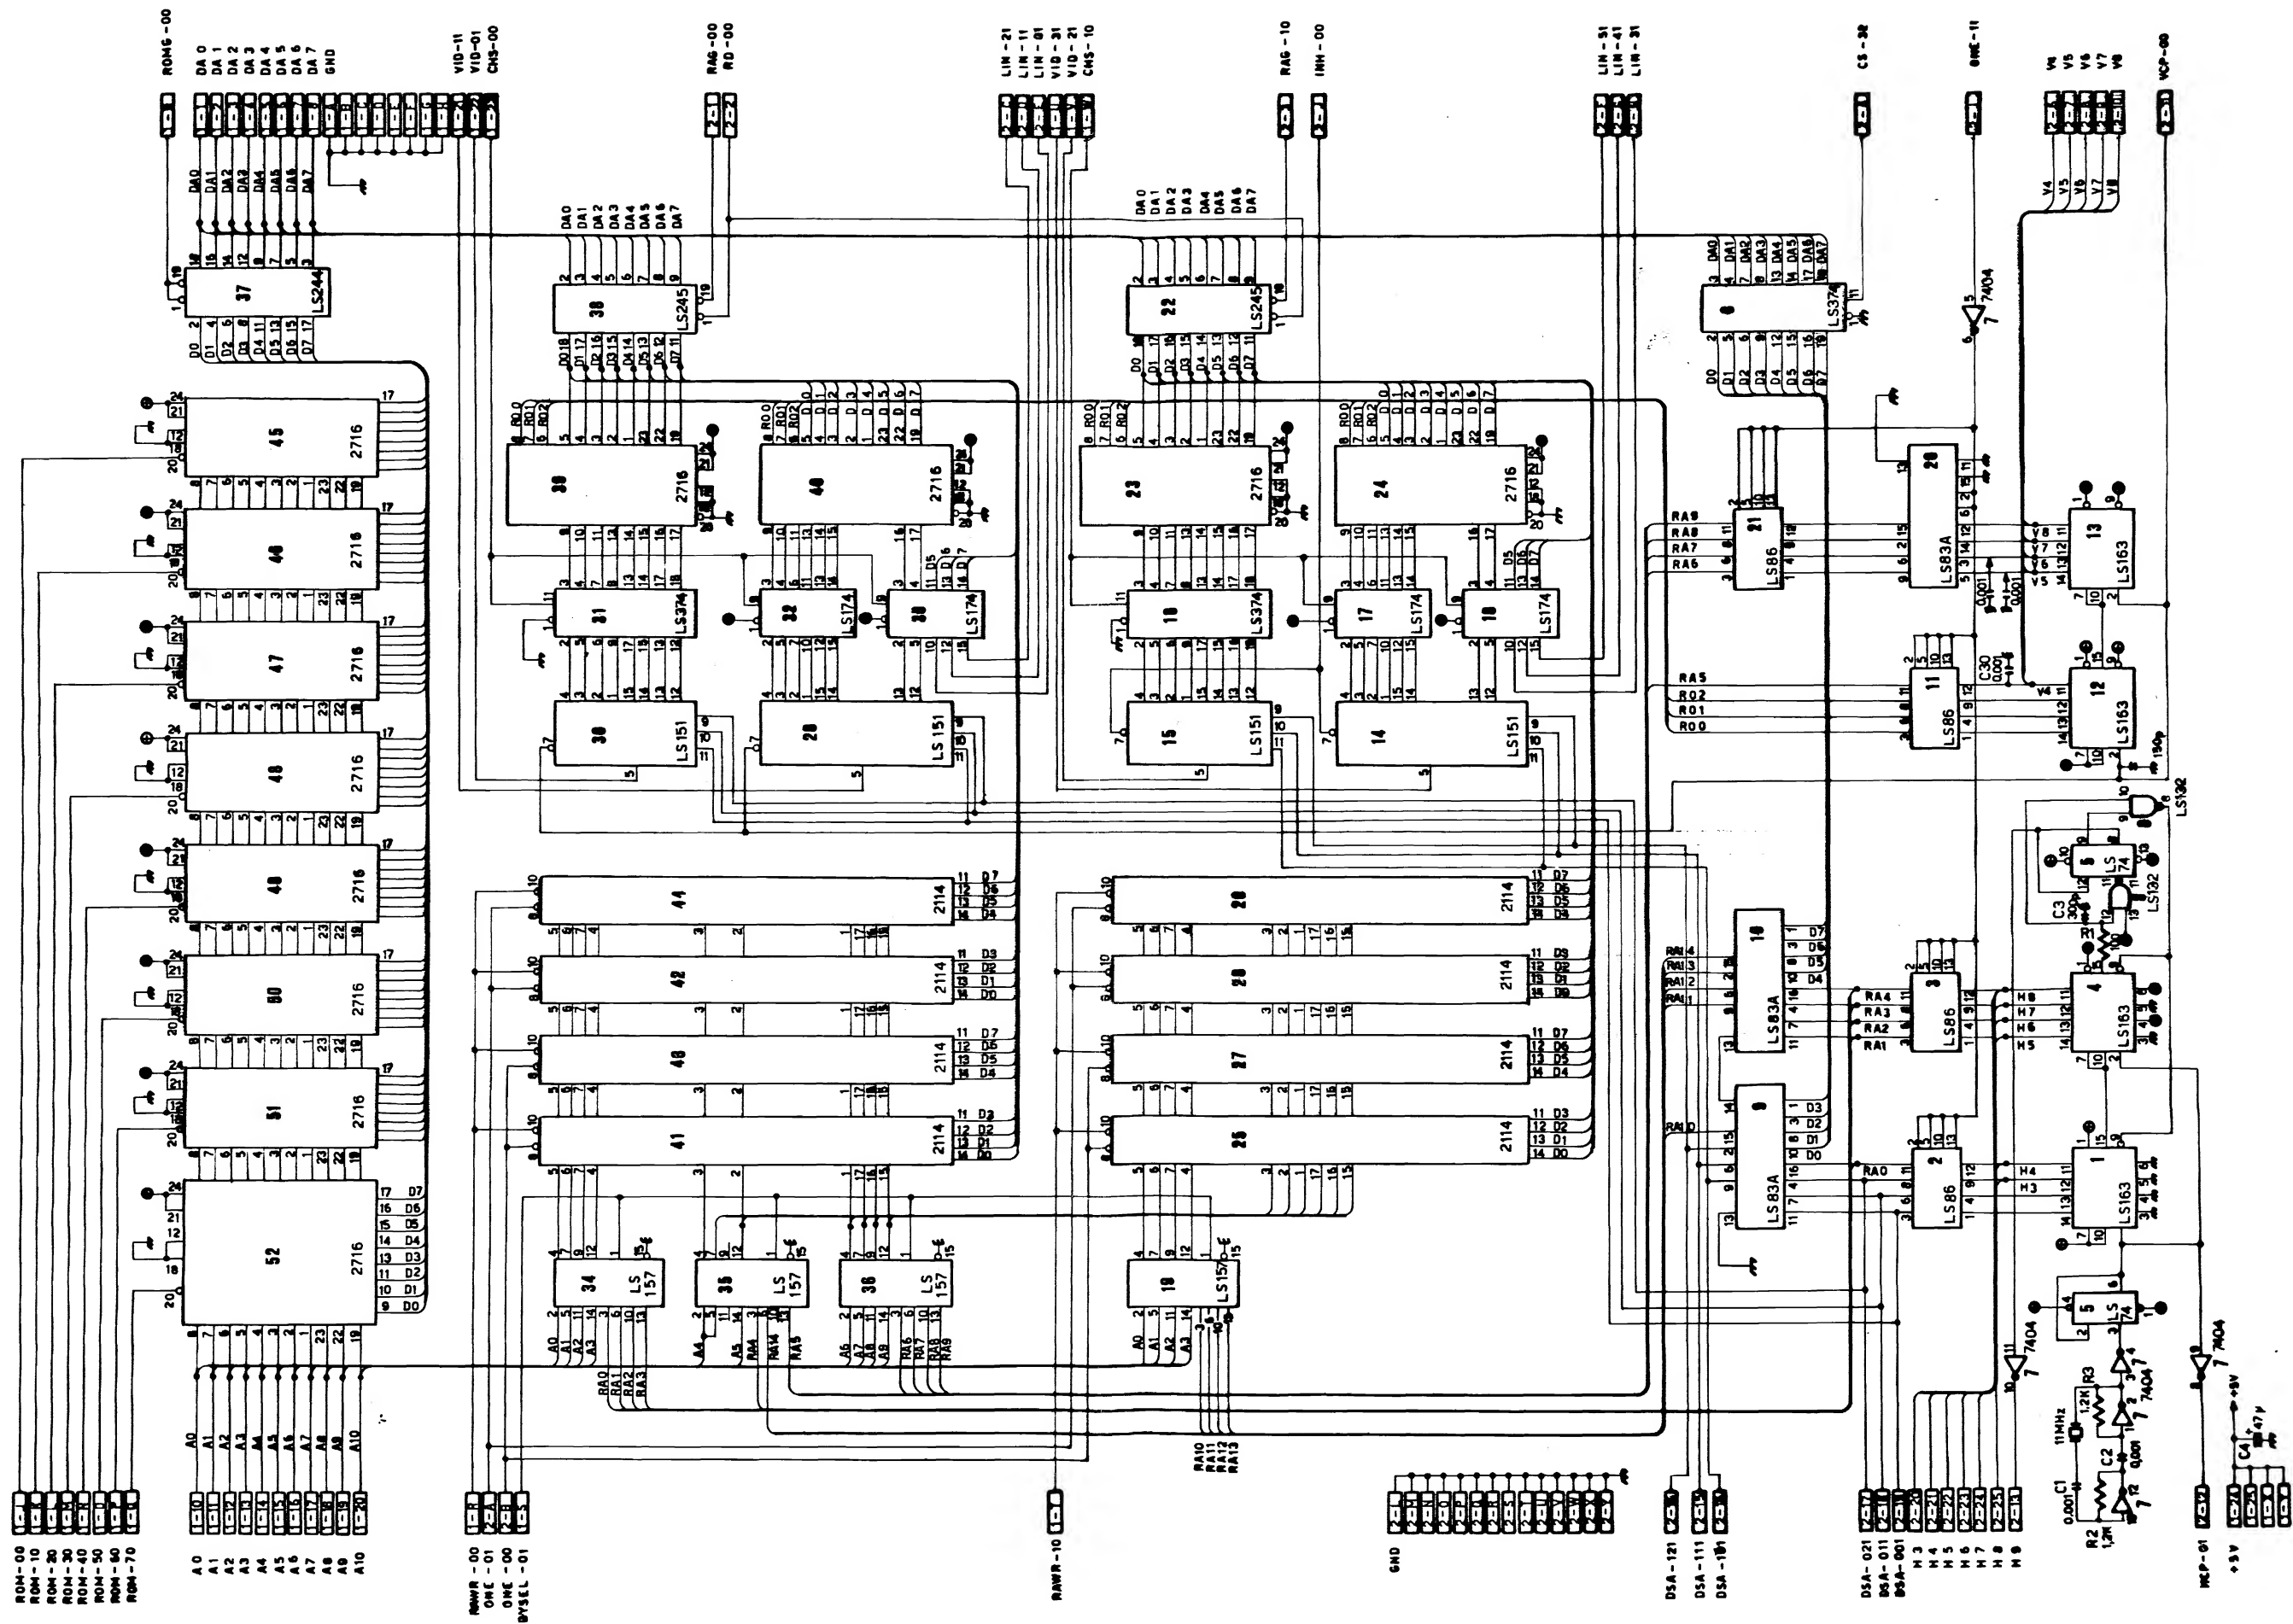

MEMORY & COUNTER BOARD 181157

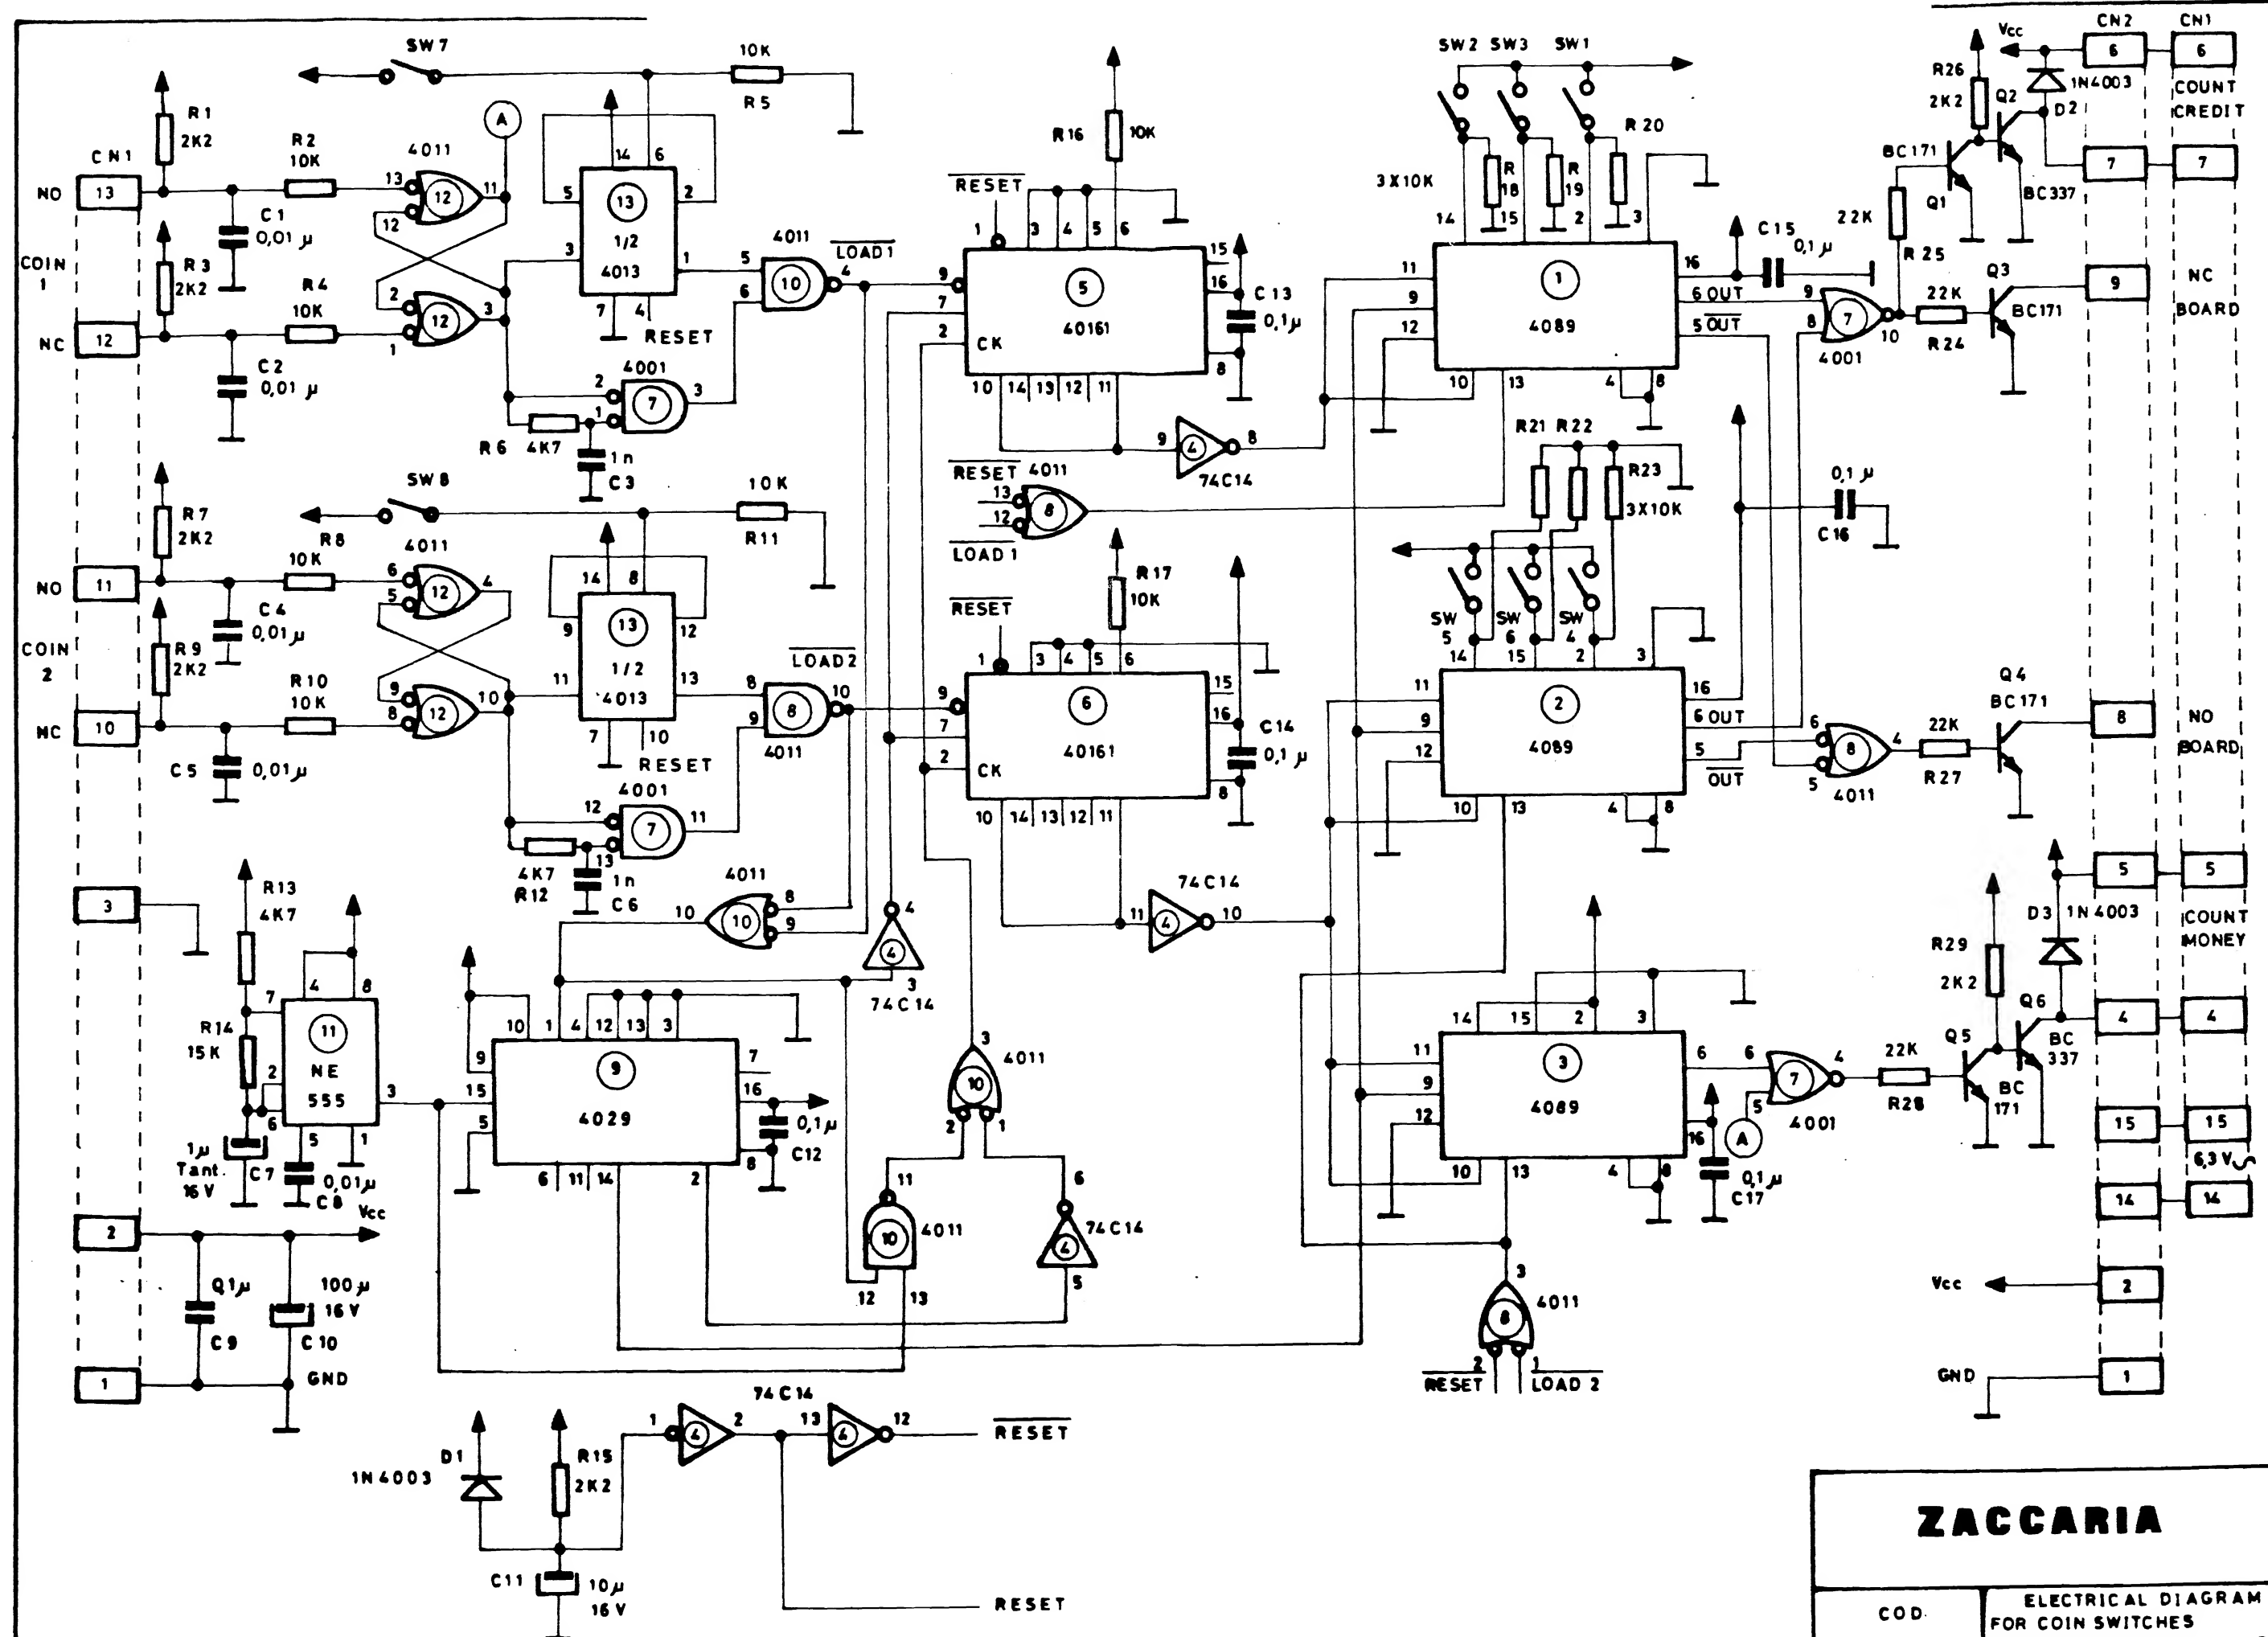

ZACCARIA

COD.
1B 1345


ELECTRICAL DIAGRAM
FOR COIN SWITCHES
ADJUSTMENT BOARD 1B1145

COIN MECHANISM 1

1	2	3	8	
OFF	ON	OFF	OFF	2 COINS - 1 PLAY
OFF	ON	OFF	ON	1 COIN - 1 PLAY
OFF	OFF	ON	ON	1 COIN - 2 PLAYS
OFF	ON	ON	ON	1 COIN - 3 PLAYS
ON	OFF	OFF	ON	1 COIN - 4 PLAYS
ON	ON	OFF	ON	1 COIN - 5 PLAYS
ON	OFF	ON	ON	1 COIN - 6 PLAYS
ON	ON	ON	ON	1 COIN - 7 PLAYS

4	5	6	7	
OFF	ON	OFF	OFF	2 COINS - 1 PLAY
OFF	ON	OFF	ON	1 COIN - 1 PLAY
OFF	OFF	ON	ON	1 COIN - 2 PLAYS
OFF	ON	ON	ON	1 COIN - 3 PLAYS
ON	OFF	OFF	ON	1 COIN - 4 PLAYS
ON	ON	OFF	ON	1 COIN - 5 PLAYS
ON	OFF	ON	ON	1 COIN - 6 PLAYS
ON	ON	ON	ON	1 COIN - 7 PLAYS

ATTENTION :
Do not use other possible combinations.

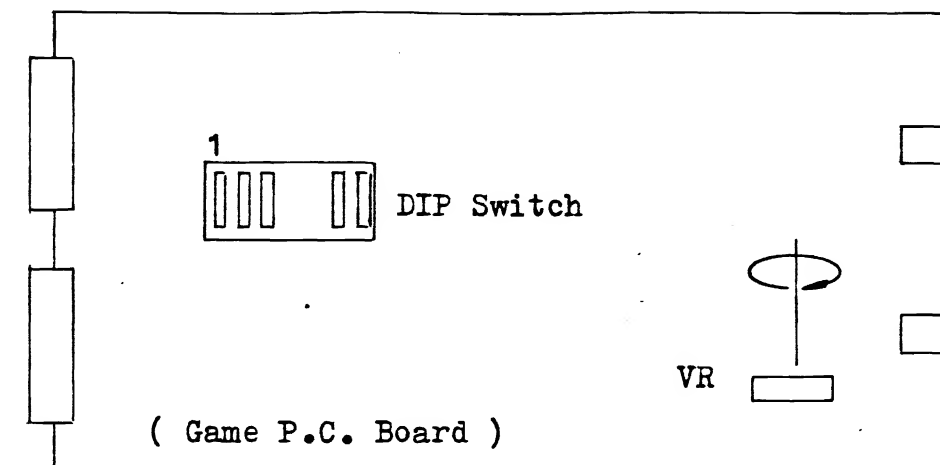

VR . . . Pot for adjusting total sounds.

To decrease the total sounds, turn the pot to the direction as shown by arrowhead.

Setting of DIP Switch

Contents	SW 1	SW 2	SW 3	SW 4	SW 5	SW 6	SW 7	SW 8						
Number of Space Ship					These switches are not used in this game. Set at "OFF" positions.									
3									ON	ON				
4									OFF	ON				
5									ON	OFF				
6									OFF	OFF				
Extended-play points														
3,000 & 30,000													ON	ON
4,000 & 40,000													OFF	ON
5,000 & 50,000													ON	OFF
6,000 & 60,000													OFF	OFF
Game Style								ON						
Table														
Upright													OFF	

